

FMT(A) Series Quick Start Guide

TURN ON

```
FMT-30L      Ver:2.0301
FM Broadcast Transmitter
```



```
RF POWER IS TURNED ON?
7      YES
```



```
RF POWER IS TURNED ON?
4      NO
```



```
F108.0 42c 1006 L:|||||
P:29.9W R:00.0W R:|||||
```



```
1      MENU
      FREQUENCY SET
```



```
2      MENU
      STEREO OR MONO
```



```
3      MENU
      RF POWER SET
```




```
4      MENU
      PC LINK
```



```
5      MENU
      EXIT
```

Knob description

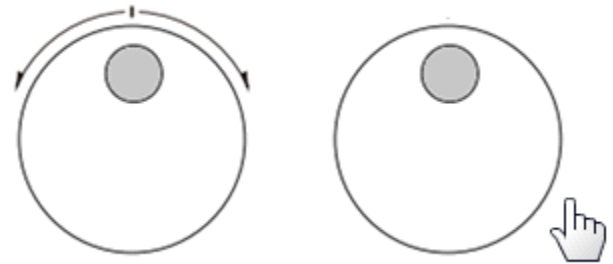

Rotate to select

Push - set

RF switch Rotate knob can ON/OFF RF power

Main Display Rotate knob can adjustment input volume;
Push into Menu

MENU 1 Push into frequency set

MENU 2 Push into stereo/mono set

MENU 3 Push into RF power set

MENU 4 Push into Pc LINK ON/OFF

MENU 5 Push exit menu

Knob description

Action	Definition	Description
Rotate left/right	Adjust,shift	Main page, Menu page, adjusting page, shift (turn clockwise to increase, turn Counterclockwise to reduce)
Push	Confirm	Enter/Exit Menu page

The interaction between the user and the control software is performed using the one key encoder. The operations that you can perform on the encoder are rotation and pushing.

Before you turn on the power, please connect the antenna or dummy load!

It is necessary that the mains system being provided with grounding to ensure both the operators safety and correct operation of the equipment.